



PNOZ m B1 Burner

PILZ
THE SPIRIT OF SAFETY

- Configurable, safe small controllers PNOZmulti 2

This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

1	Introduction	5
1.1	Validity of documentation	5
1.2	Using the documentation	5
1.3	Definition of symbols	5
2	Overview	7
2.1	Range	7
2.2	Unit features	7
2.3	USB memory	8
2.4	Front view	8
3	Safety	9
3.1	Intended use	9
3.2	System requirements	11
3.3	Safety regulations	11
3.3.1	Safety assessment	11
3.3.2	Use of qualified personnel	11
3.3.3	Warranty and liability	12
3.3.4	Disposal	12
3.3.5	For your safety	12
4	Function description	13
4.1	Integrated protection mechanisms	13
4.2	Functions	13
4.3	Application for furnaces	13
4.4	System reaction time	14
4.5	Detection of shorts across contacts	15
4.6	Block diagram	16
4.7	Diagnostics	16
4.8	Ethernet interface	16
5	Installation	17
5.1	Control cabinet installation	17
5.1.1	Mounting distances	17
5.2	Dimensions in mm	19
5.3	Connecting the base unit and expansion modules	19
6	Commissioning	21
6.1	General wiring guidelines	21
6.2	Connection	21
6.3	Ethernet interfaces	22
6.3.1	RJ45 interfaces ("Ethernet")	22
6.3.2	Requirements of the connection cable and connector	22
6.3.3	Interface configuration	22
6.3.4	RJ45 connection cable	23
6.4	Use USB memory	24
6.5	Load project from PNOZmulti Configurator	25
6.6	Activate project via the display on the base unit	26

6.7	Display settings	26
6.7.1	Operate menu	26
6.7.2	Displays and settings	27
6.7.2.1	Status indicators.....	27
6.7.2.2	Project menu	28
6.7.2.3	Device Info menu	30
6.7.2.4	Error Stack menu	31
6.7.2.5	Operating Info menu	31
6.7.2.6	Connections menu	32
6.7.2.7	Ethernet menu.....	33
6.7.2.8	Time menu	34
6.7.2.9	System mode menu	34
6.8	Function test during commissioning.....	35
7	Operation	36
7.1	LED indicators.....	36
7.2	Show error stack on the display	37
8	Technical details	38
8.1	Safety characteristic data	40
9	Order reference	41
9.1	Product.....	41
9.2	Accessories	41
9.2.1	Terminals	41
9.2.2	USB memory	41
9.2.3	Plug-in connector	41
9.2.4	Terminating plug	41
10	EC declaration of conformity	42
11	UKCA-Declaration of Conformity	43

1 Introduction

1.1 Validity of documentation

This documentation is valid for the product PNOZ m B1 Burner from Version HW:01, FW:01.05.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

2.1 Range

- ▶ Base unit PNOZ m B1 Burner
- ▶ Terminator
- ▶ Documentation on data medium
- ▶ USB memory

2.2 Unit features

Application of the product PNOZ m B1 Burner:

Base unit of the configurable control system PNOZmulti 2

The product has the following features:

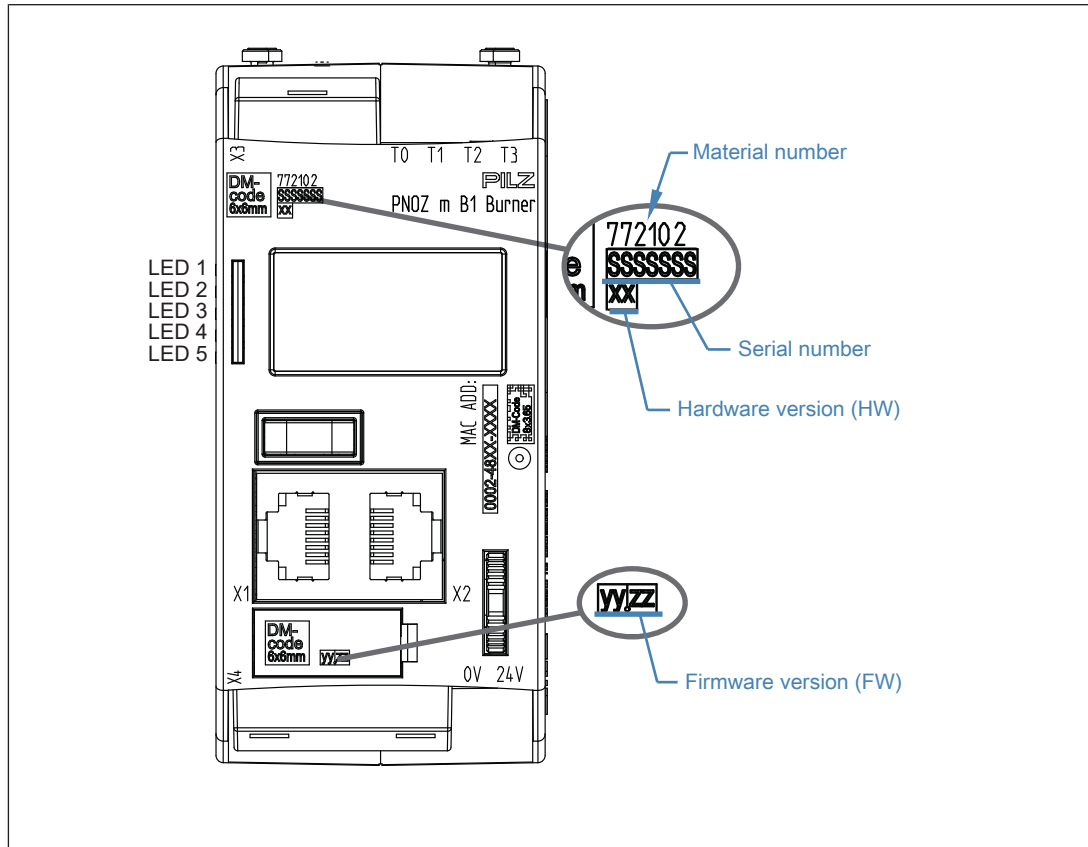
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Designed to monitor and control furnaces
- ▶ Support for module programs
- ▶ 4 test pulse outputs to detect shorts between the inputs
- ▶ Backlit display for:
 - Status information
 - Unit information
 - Diagnostics
 - Activate project
 - Ethernet settings
 - System's date and time
 - Stop and start device
- ▶ Multifunction switch for menu control
- ▶ Ethernet interface with switch
- ▶ LED display for:
 - Operating status
 - Error messages
 - Diagnostics
 - Supply voltage
- ▶ Plug-in connection terminals:

Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Expansion modules can be connected
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)

2.3 USB memory

To save and transfer projects you need the Pilz USB memory that is supplied with the device.

2.4 Front view



Legend

- X1/X2: Ethernet interface
- X3: Test pulse outputs T0 - T3
- X4: Labelling clip for firmware version
- LED 1: Supply voltage
- LED 2: FS (Initialise/Run/Stop)
- LED 3: ST (Initialise/Run/Stop)
- LED 4: Diag (Project reset/Identify project)
- LED 5: FAULT (IFault/OFault)

To determine the version of the device, please note:

The firmware version number is on the labelling clip. This is also the version number that must be selected in the PNOZmulti Configurator under **Version** during the hardware configuration.

3 Safety

3.1 Intended use

The configurable system PNOZmulti 2 is used for the safety-related interruption of safety circuits and is designed for use in:

- ▶ Emergency stop equipment
- ▶ Safety circuits in accordance with VDE 0113 Part 1 and EN 60204-1



CAUTION!

Inputs and outputs for standard functions must not be used for safety-related applications.

Use in furnaces

The unit is designed to be used in continuous operation to control and monitor furnaces in accordance with the standards:

- ▶ EN 12953-7: Shell boilers
- ▶ EN 12952-8: Water-tube boilers and auxiliary installations
- ▶ EN/IEC 61508: SIL 3: Functional safety of safety-related electrical/electronic/programmable electronic systems
- ▶ EN 230: Automatic burner control systems for oil burners
- ▶ EN 267: Automatic forced draught burners for liquid fuels (draft)
- ▶ EN 298: Automatic gas burner control systems for gas burners and gas burning appliances with or without fans
- ▶ EN 676: Automatic forced draught burners for gaseous fuels
- ▶ EN 746-2: Industrial thermoprocessing equipment
- ▶ EN 1643: Valve proving systems for automatic shut-off valves for gas burners and gas appliances
- ▶ EN 50156-1 and EN 50156-2 Electrical equipment for furnaces and ancillary equipment
- ▶ EN 13611 Safety and control devices for burners and appliances burning gaseous and/or liquid fuels
- ▶ UL 60730-2-5: Automatic Electrical Controls for Household and Similar Use, Part 2-5: Particular Requirements for Automatic Electrical Burner Control Systems
- ▶ NFPA 85 Boiler and Combustion Systems Hazards Code
- ▶ NFPA 86 Standard for Ovens and Furnaces
- ▶ NFPA 87 Standard for Fluid Heaters

These include monitoring of:

- ▶ Safety chains
- ▶ Combustion air pressure
- ▶ Ignition
- ▶ Flame monitoring
- ▶ External compound controller

- Tightness control

And control of:

- Safety valves
- Ignition valves
- Vent valve
- Ignition
- External compound controller
- Combustion air blower

The following oil and gas burner types can be monitored:

- Master burner with direct ignition
- Master burner with indirect ignition and joint flame monitoring
- Master burner with indirect ignition and separate flame monitoring
- Slave burner with direct ignition
- Slave burner with indirect ignition and joint flame monitoring
- Slave burner with indirect ignition and separate flame monitoring

Please note:

- To protect against transient power failures (EN 61000-4-11) the AC power supply used for the system must provide secondary buffering for 20 ms.
- If the system is used in a DC network, sufficient overvoltage protection must be ensured. Use external protection elements for overvoltage protection that fulfil at least the following properties:
Installation class 4 / test level 4 in accordance with EN 61000-4-5 (4 kV 1.2/50 µs)

Guidelines for UL certification:



WARNING!

In order to interrupt fuel supply, two valves are required that are connected in series and are connected to two independent safety outputs.

Regulation on appliances burning gaseous fuels (EU) 2016/426

The product PNOZ m B1 Burner fulfils the requirements of the Regulation on appliances burning gaseous fuels (EU) 2016/426 and it can be used as an equipment under the terms of the directive.

Year of manufacture

The year of manufacture is specified on the product after the reference YOM (Year of Manufacturing).

Improper use

The following is deemed improper use in particular

- Any component, technical or electrical modification to the product,
- Use of the product outside the areas described in this operating manual,
- Use of the product outside the technical details (see [Technical details](#)  38).

**NOTICE****EMC-compliant electrical installation**

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

3.2 System requirements

Please refer to the "Product Modifications" document in the "Version overview" section for details of which versions of the PNOZmulti Configurator can be used for this product.

3.3 Safety regulations

3.3.1 Safety assessment

Before using a device, a safety assessment in accordance with the Machinery Directive is required.

The product as an individual component fulfils the functional safety requirements in accordance with EN ISO 13849 and EN 62061. However, this does not guarantee the functional safety of the overall plant/machine. To achieve the relevant safety level of the overall plant/machine's required safety functions, each safety function needs to be considered separately.

3.3.2 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.3.3 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.3.4 Disposal

- ▶ In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

3.3.5 For your safety

The unit meets all the necessary conditions for safe operation. However, you should always ensure that the following safety requirements are met:

- ▶ This operating manual only describes the basic functions of the unit. Advanced functions are described in the online help for the PNOZmulti Configurator, in the "PNOZmulti Communication Interfaces" document and in "PNOZmulti Special Applications". Only use these functions once you have read and understood the documentation.
- ▶ Please note the "PNOZmulti Installation Manual".
- ▶ You must note the information stated in the "PNOZmulti Safety Manual".
- ▶ Adequate protection must be provided for all inductive consumers.
- ▶ Do not open the housing or make any unauthorised modifications.
- ▶ Please make sure you shut down the supply voltage when performing maintenance work (e.g. exchanging contactors).

4 Function description

4.1 Integrated protection mechanisms

The relay meets the following safety requirements:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety device remains effective in the case of a component failure.

4.2 Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A USB memory stick is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

4.3 Application for furnaces

The base unit PNOZ m B1 Burner is designed for controlling and monitoring furnaces (see online help for the PNOZmulti Configurator).

These include:

Monitoring:

- ▶ Safety chains
- ▶ Combustion air pressure
- ▶ Ignition
- ▶ Flame monitoring
- ▶ External compound controller
- ▶ Tightness control

and controlling:

- ▶ Safety valves
- ▶ Ignition valves
- ▶ Vent valve
- ▶ Ignition
- ▶ External compound controller
- ▶ Combustion air blower

The following oil and gas burner types can be monitored:

- ▶ Master burner with direct ignition
- ▶ Master burner with indirect ignition and joint flame monitoring
- ▶ Master burner with indirect ignition and separate flame monitoring
- ▶ Slave burner with direct ignition
- ▶ Slave burner with indirect ignition and joint flame monitoring
- ▶ Slave burner with indirect ignition and separate flame monitoring

4.4 System reaction time

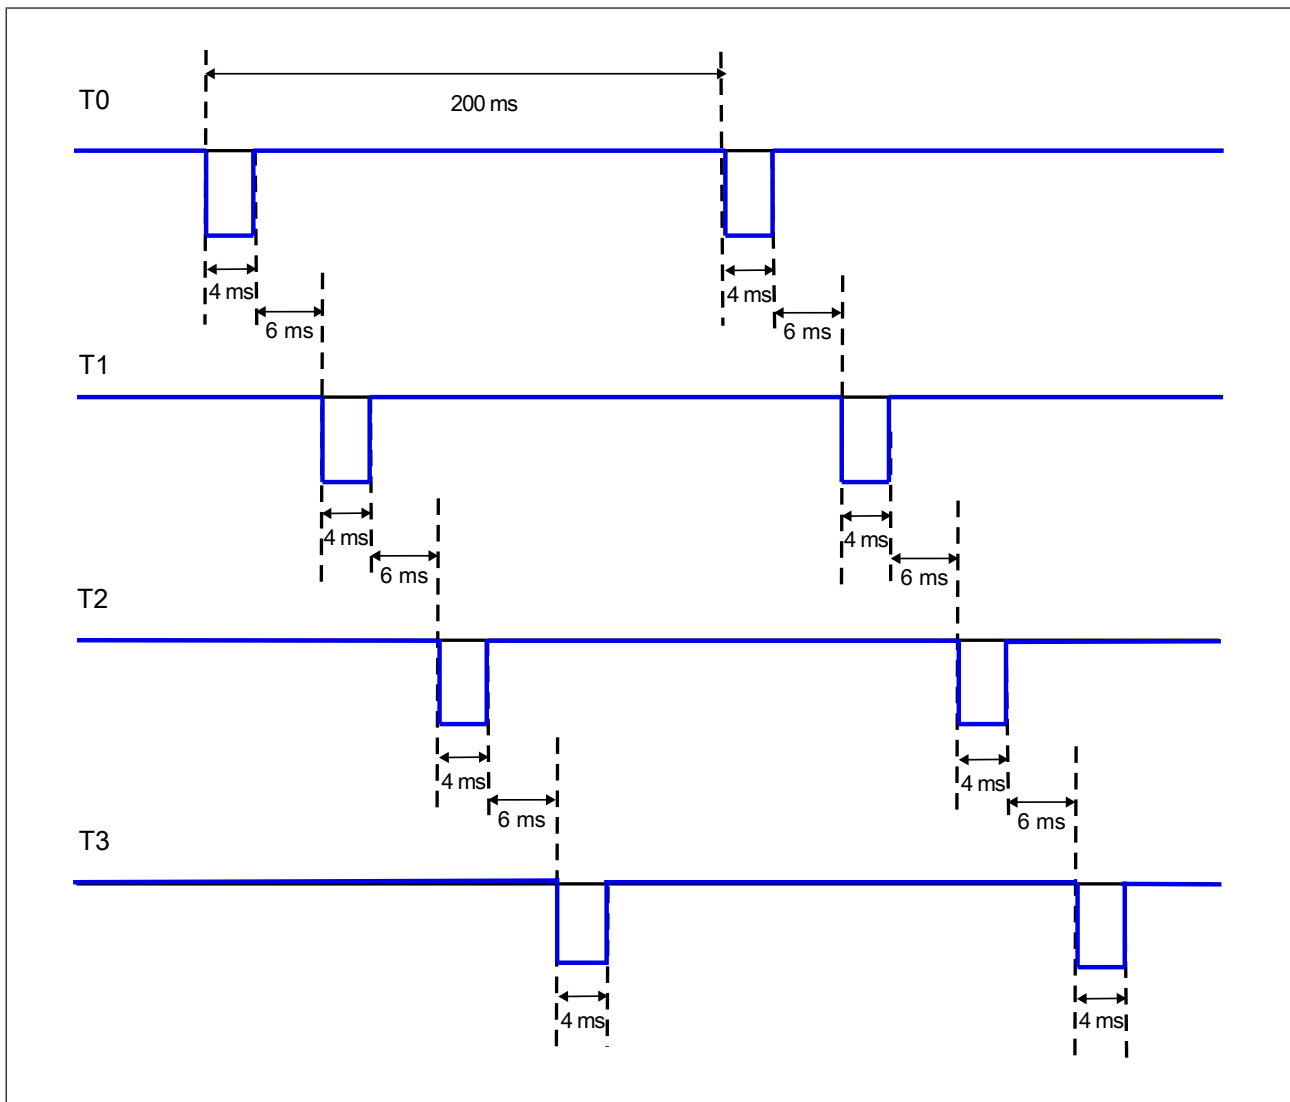
Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

4.5 Detection of shorts across contacts


4 test pulse outputs that use different test pulses (test pulse 0 (T0) ... test pulse 3 (T3)) are available for detecting shorts between the inputs.

Shorts between inputs are detected if the inputs are connected to different test pulses (test pulse 0 ... test pulse 3).

Pulsing of test pulse outputs T0 ... T3 (typical times):



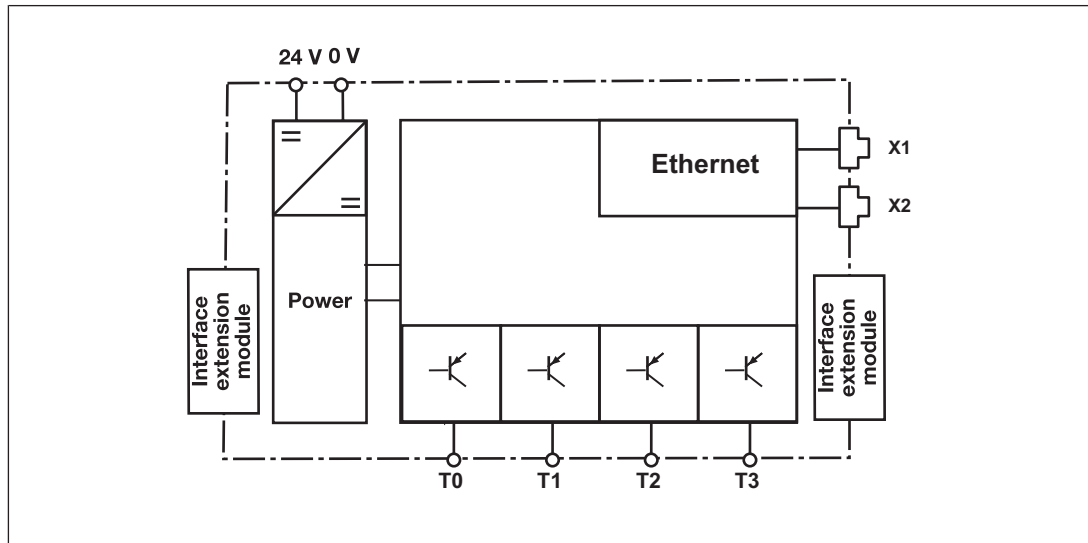4.6 Block diagram



4.7 Diagnostics

The status and error messages displayed by the LEDs are saved in an error stack. This error stack can be shown on the display or can be read from the PNOZmulti Configurator via the Ethernet interface. More comprehensive diagnostics are possible via the interfaces or via one of the fieldbus modules. For more information refer to the document **PNOZmulti 2 Communication Interfaces** and the **Online Help for the PNOZmulti Configurator**.

4.8 Ethernet interface

The product PNOZ m B1 Burner has an Ethernet interface to

- ▶ Manage and download projects
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions.

Information on diagnostics via the interfaces can be found in the document **PNOZmulti Communication Interfaces**.

The connection to Ethernet is made via the two 8-pin RJ45 sockets.

The Ethernet interface is configured via the menu in the display (see chapter entitled Displays and settings) or in the PNOZmulti Configurator (see **Online Help for the PNOZmulti Configurator**).

5 Installation

5.1 Control cabinet installation

- ▶ The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Install the system vertically on to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could damage the safety system.
- ▶ Use the locking elements on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Open the locking slide before lifting the unit from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.



NOTICE

Damage due to electrostatic discharge!

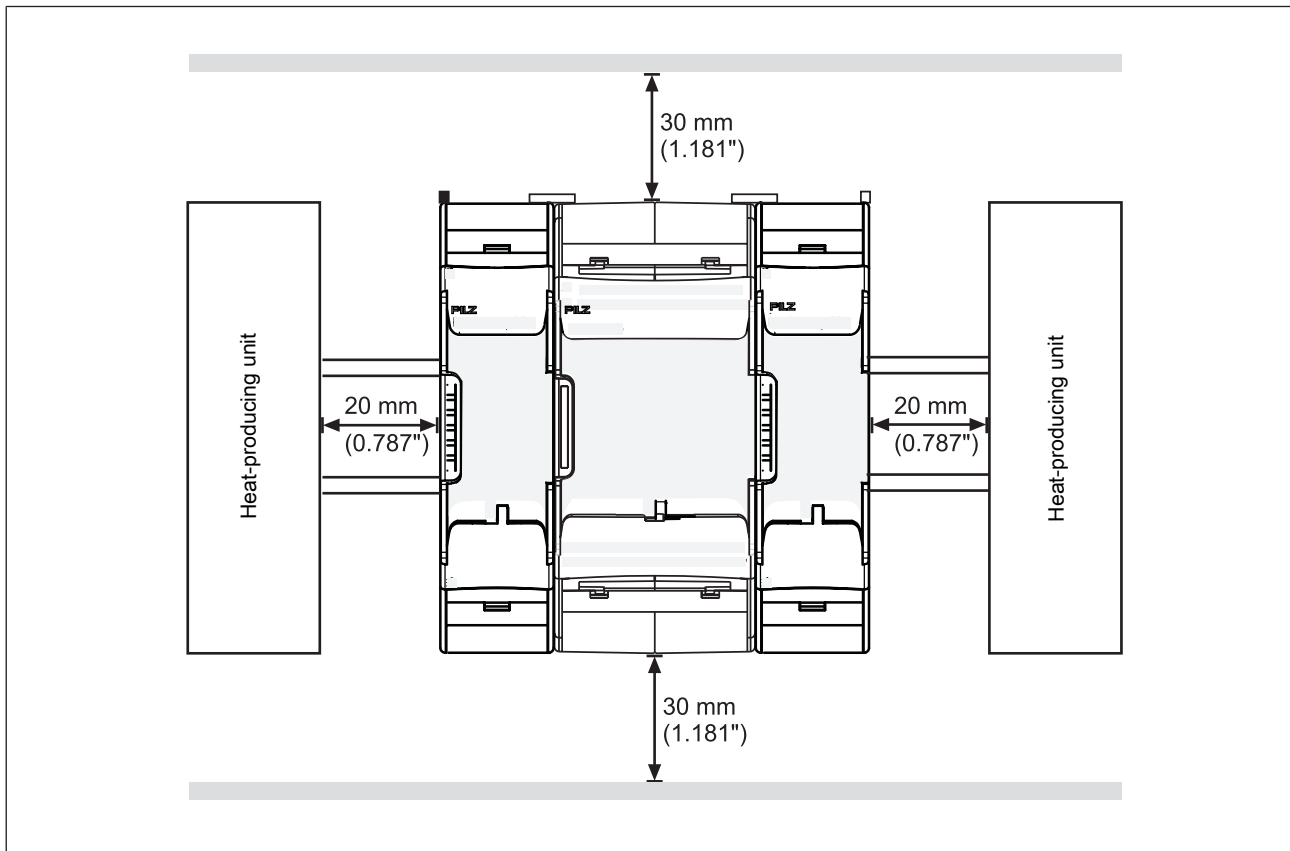
Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

5.1.1 Mounting distances


With control cabinet installation it is essential to maintain a certain distance from the top and bottom, as well as to other heat-producing devices (see diagram). The values stated for the mounting distances are minimum specifications.

The ambient temperature in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.

Mounting distances:



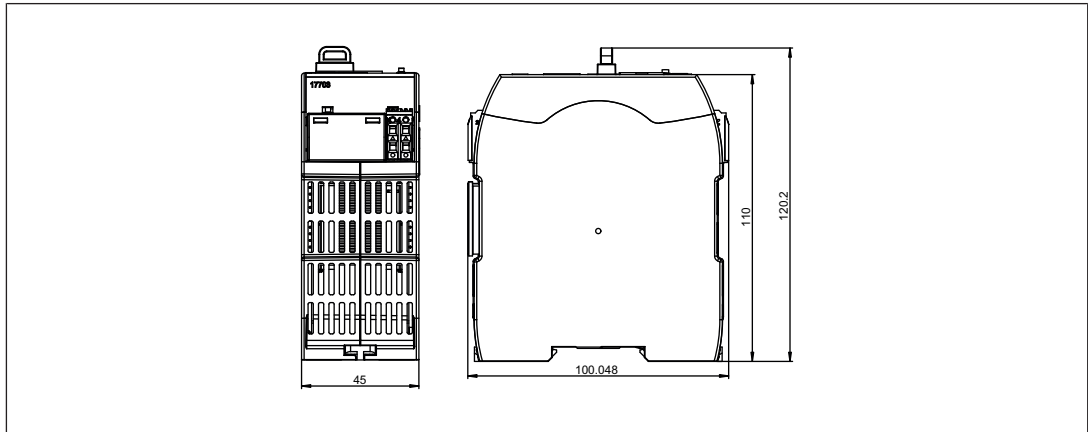5.2 Dimensions in mm




5.3 Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.

The modules are linked via jumpers.

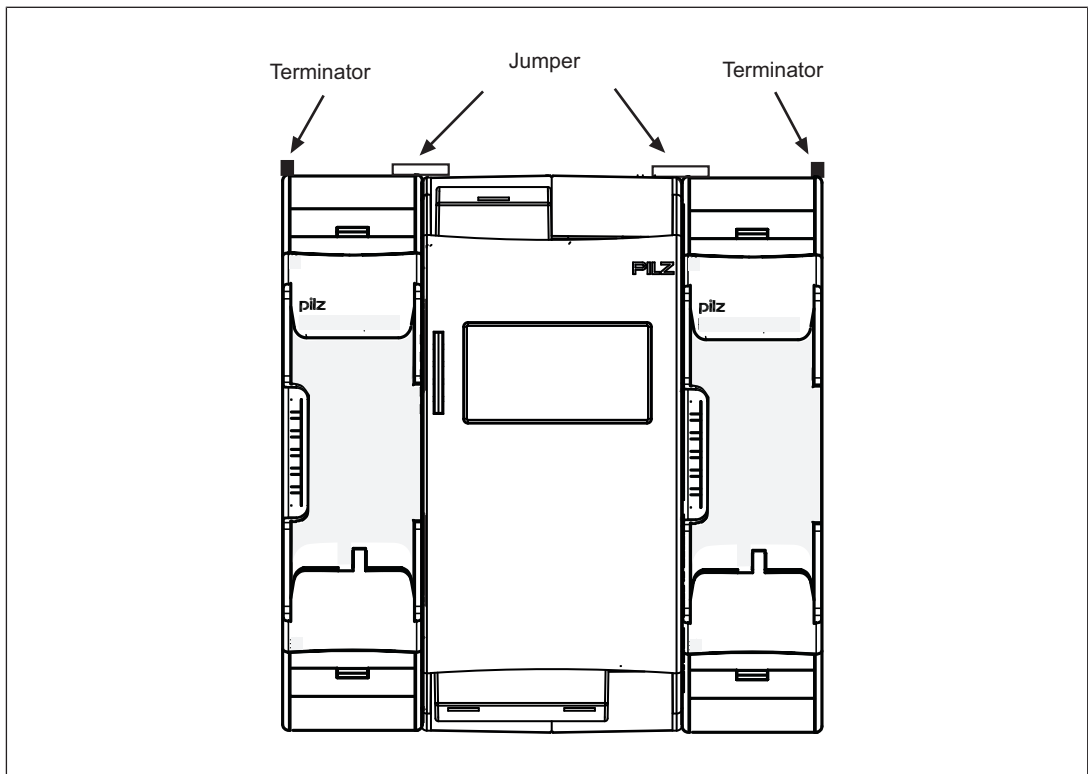- ▶ Remove the terminator on the side of the base unit.
- ▶ Install the base unit and expansion modules on the mounting rail in the order configured in the PNOZmulti Configurator and connect the units using the jumper supplied.
- ▶ Fit the terminator to the unconnected interfaces on the base unit and expansion module.



**CAUTION!**

Only connect the base unit and expansion modules when the supply voltage is switched off.

6 Commissioning

6.1 General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[38\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Adequate protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV, PELV).
- ▶ Test pulse outputs are used to detect shorts between the inputs. Shorts between inputs are detected if the inputs are connected to different test pulses (test pulse 0 ... test pulse 3). Shorts between inputs of the same module with the same test pulses will not be detected.
- ▶ Test pulse outputs must exclusively be used to activate the inputs. They must not be used to drive loads.
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ The maximum permitted total current of the test pulse outputs is 640 mA.

6.2 Connection

Procedure:

- ▶ Connect the supply voltage for the control system:
 - Terminal 24 V: + 24 VDC
 - Terminal 0 V: 0 V,
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A



CAUTION!

Do not connect or disconnect expansion modules and terminators during operation.

6.3 Ethernet interfaces

6.3.1 RJ45 interfaces ("Ethernet")

Two free switch ports are provided as Ethernet interfaces via an internal autosensing switch. The autosensing switch automatically detects whether data transfer is occurring at 10 Mbit/s or 100 Mbit/s.



INFORMATION

The connected subscribers must support the autosensing/autonegotiation function. If not, the communication partner must be set permanently to "10 Mbit/s, half duplex".

The switch's automatic crossover function means there is no need to distinguish on the connection cable between patch cable (uncrossed data line connection) and crossover cable (crossover data line connection). The switch automatically creates the correct data line connection internally. Patch cable can therefore be used as the connection cable for end devices as well as cascading.

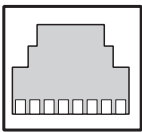
Both Ethernet interfaces use RJ45 technology.

6.3.2 Requirements of the connection cable and connector

The following minimum requirements must be met:

- ▶ Ethernet standards (min. Category 5) 10BaseT or 100BaseTX
- ▶ Double-shielded twisted pair cable for industrial Ethernet use
- ▶ Shielded RJ45 connectors (industrial connectors)


6.3.3 Interface configuration

RJ45 socket 8-pin	PIN	Standard	Crossover
	1	TD+ (Transmit+)	RD+ (Receive+)
	2	TD- (Transmit-)	RD- (Receive-)
	3	RD+ (Receive+)	TD+ (Transmit+)
	4	n.c.	n.c.
	5	n.c.	n.c.
	6	RD- (Receive-)	TD- (Transmit-)
	7	n.c.	n.c.
	8	n.c.	n.c.

6.3.4 RJ45 connection cable

RJ45 connector

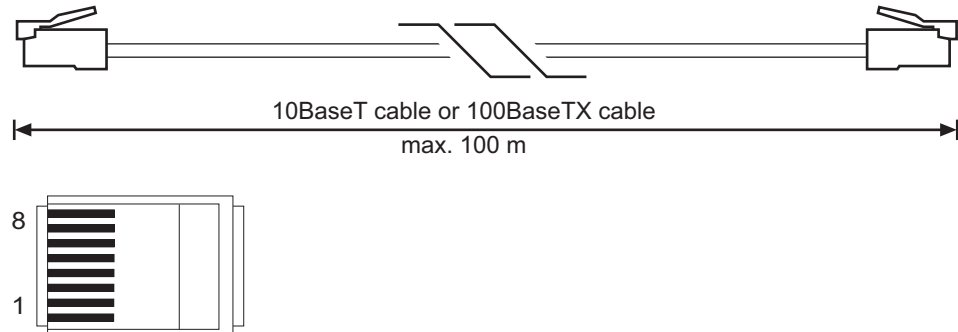8-pin



NOTICE

With the plug-in connection please note that the data cable and connector have a limited mechanical load capacity. Appropriate design measures should be used to ensure that the plug-in connection is insensitive to increased mechanical stress (e.g. through shock, vibration). Such measures include fixed routing with strain relief, for example.

6.4 Use USB memory

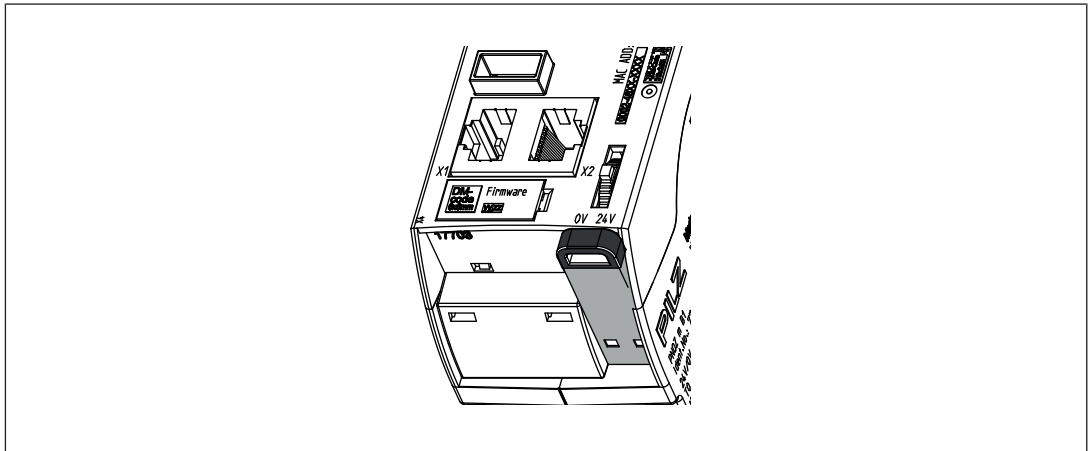
Multiple projects can be stored on the USB memory supplied. One of these can be activated and executed on the base unit.

Please note the following when using the USB memory:


- ▶ The USB memory must always be plugged in during operation.
- ▶ In order to copy projects, for example, the USB memory can be removed and plugged into the PC or into another base unit PNOZ m B1 Burner.
- ▶ Only Pilz USB memories may be used!

Use USB memory

- ▶ Carefully remove the USB memory from the holder on the bottom of the device.



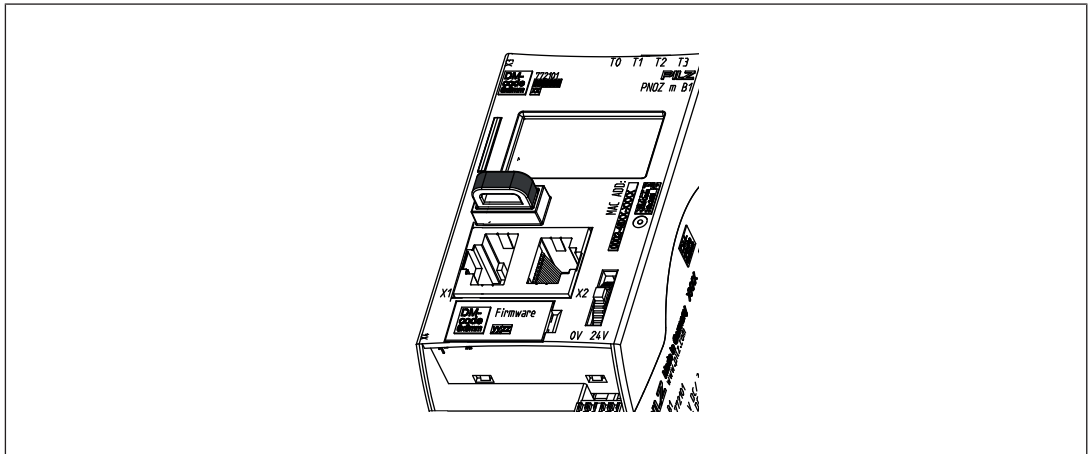
- ▶ Apply light pressure to insert the USB memory into the slot. Take care not to tilt the USB memory. It should be easy to insert.
- ▶ Insert the USB memory into the slot, only as far as the end of the metal housing. The plastic handle must not be inserted



Remove USB memory

- ▶ Due to mechanical requirements, the USB memory is inserted tightly within the device and so may be difficult to remove.

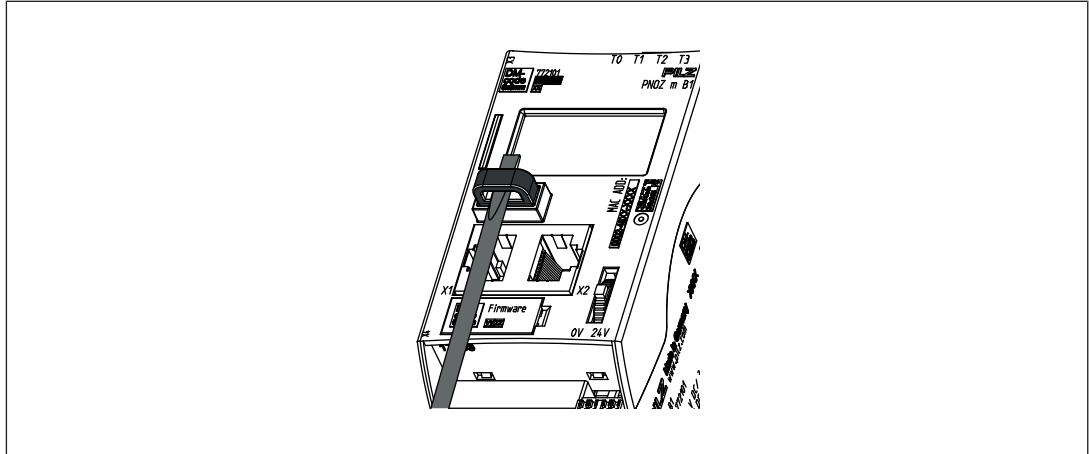In this case use an appropriate tool, such as a screwdriver for example, and carefully extract the USB memory (see diagram).



6.5

Load project from PNOZmulti Configurator

Projects can be transferred from the PNOZmulti Configurator to the USB memory. Several projects may be stored on the USB memory. A project can be activated directly. This can be performed in the Project Manager of the PNOZmulti Configurator (see online help for the PNOZmulti Configurator).

Procedure:

- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit PNOZ m B1 Burner via the Ethernet interface.
- ▶ Make sure that the USB memory is plugged into the base unit PNOZ m B1 Burner.
- ▶ Switch on the supply voltage.
- ▶ Transfer the required project to the USB memory and activate it on the base unit via the Project Manager on the PNOZmulti Configurator, as described in the online help for the PNOZmulti Configurator.
- ▶ As the project is loaded, the base unit must be stopped and then restarted.
- ▶ Once the project has been loaded successfully and the device has been restarted, the status of the supply voltage is shown on the display. The "RUN" LED is lit.

6.6 Activate project via the display on the base unit

A project that is stored on the USB memory can be activated in the base unit via settings on the display.

Procedure:

- ▶ Make sure that the USB memory containing the current project is plugged into the base unit PNOZ m B1 Burner.
- ▶ Switch on the supply voltage.
- ▶ Stop the device via the multifunction switch on the display via the menu setting **System mode** -> **Stop system** (for details of how to navigate the display see the section entitled Display settings)
- ▶ In the **Project** menu, navigate to the folder containing the required project and select the project file with the extension **.mpnoz2**.
- ▶ Load the project by pressing the multifunction switch and restart via the menu setting **System mode** -> **Restart system**.

6.7 Display settings

Various settings can be made and information displayed via the menu on the device's display.

6.7.1 Operate menu

The menu settings are made on the device's display via a multifunction switch. You can switch between the menu levels by pressing or turning the multifunction switch.

Press multifunction switch



- ▶ Confirm selection/setting
- ▶ Switch to sub-menu
- ▶ Exit menu: \..

Move multifunction switch up or down



- ▶ Select menu

6.7.2 Displays and settings

The LC display has five lines. Information is shown on the display and settings can be made.

The field at the top right of the display shows information about the connection and instructions for the menu settings:

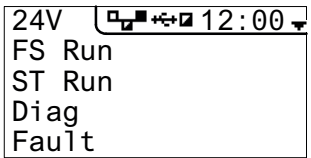
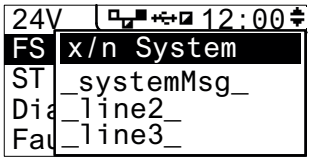
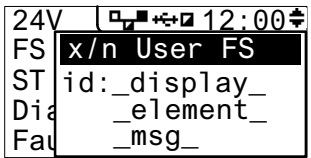
  12:00 

Legend:

-  Network connection/traffic
-  USB memory inserted
- 12:00** System time
-  Press the multifunction switch to go back to the higher level menu
-  Press the multifunction switch to access the sub-menu
-  Hold the multifunction switch down for 4 s to confirm the selection or perform the action
-  Press the multifunction switch to obtain information
-  Press the multifunction switch to call up the system message
-  Press the multifunction switch to call up the user message








6.7.2.1

Status indicators

Display	Display	Description
Permanent display	 	LED display ▶ A warning symbol shows that a message is present, which can be called up
System / User... System or display messages	 	 System message is present or  User message is present (user-specific messages that are created in the PNOZmulti Configurator)

6.7.2.2 Project menu

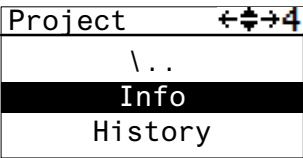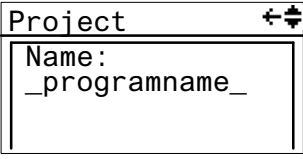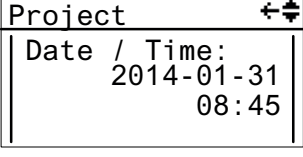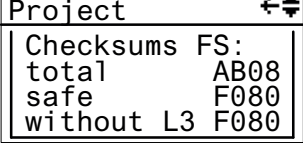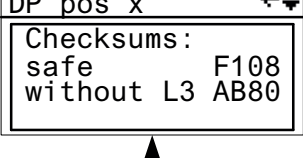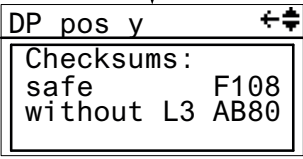
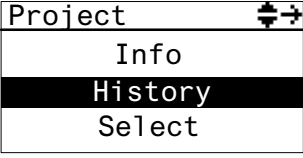
In the **Project** menu you can display information about the project that is activated on the device. You can also activate a different project from the USB memory on the device. See also [Activate project via the display on the base unit](#) [📖 26] and reset the project on the device.

Display	Display	Description
Info:		Information is displayed about the project activated on the device
Name Project name		Name of project
Date / Time Creation data and time		Date and time that the project was created
Check sums FS Overall check sum and check sums of main program		Display of check sums: ▶ Overall project check sum ▶ Check sum safe of main program ▶ Check sum safe of main program without level 3
Check sums DP pos x Check sums of module program	 	Display of check sums of module program ▶ Check sum safe ▶ Check sum safe without level 3
History: Project history		Project information is displayed for one of the last 16 projects activated

Display	Display	Description
Name Date / Time Check sum FS Check sum DP pos x ...		Display of project information for a selected project
Select: Activate project		Select project contained in the USB memory and activate it on the base unit ► Prerequisite: Device must be stopped ► Hold down multifunction switch for 4 s in order to activate the project
Reset: Reset or update project.		After a reset, the active project is reloaded from the USB memory ► Prerequisite: Device must be stopped ► Hold down multifunction switch for 4 s in order to reset

6.7.2.3

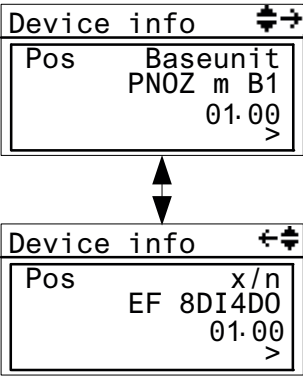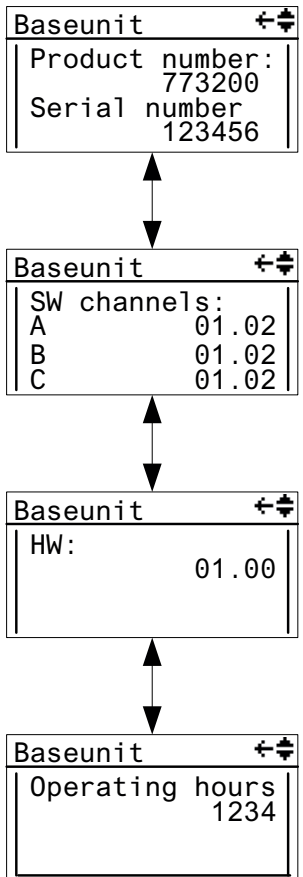Device Info menu

Display	Example	Description
Device Info		Information on the base unit and expansion modules. Overview: ► Position/slot ► Device type ► Firmware version
Device information for module		Show device information for a selected module: ► Order number ► Serial number ► Software versions ► Hardware version ► Operating hours

6.7.2.4 Error Stack menu



Display	Example	Description
Error stack	x / 256 Date 2014-01-31 Time 23:59:59 Chn AB ST EC EN 01 AB x / 256 EC EN 01 AB EP 00 01 02 03 04 05 06 07	Display of entries in the error stack (see also section entitled Show error stack on the display [📖 37]) To read the error stack entries please refer to the document <i>PNOZmulti Error Messages</i>

6.7.2.5 Operating Info menu

Display	Example	Description
Operating Info	Pos Baseunit FS cycl 10000us FS cpu 80%	Display of specific operating parameters for the base unit and expansion modules. e.g.: cycle time, operating temperature, frequencies





6.7.2.6 Connections menu

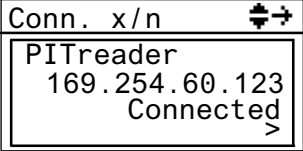
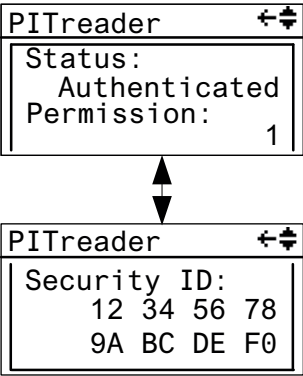
In the **Connections** menu the connections to the PNOZmulti can be displayed.

Display	Example	Description
Conn. x/n		Information on the connected device: ▶ Device ▶ IP address ▶ Connection status: – Connected: Connected – Connecting: Connecting – Failed: Connection has failed – Error: Error in the connection
PITreader		Status information on PITreader: ▶ Status: – Authenticated: PITreader detected the transponder key. Permission exists – No key: There is no transponder key inserted in PITreader – No permission: The transponder key has no permission (permission = 0) – Auth. failed: Authentication has failed. The data from PITreader are invalid – Not ready: The connection to PITreader is interrupted. ▶ Permission: Permission 1... 64 of the transponder key Security ID: Safety identifier of the transponder key

6.7.2.7 Ethernet menu

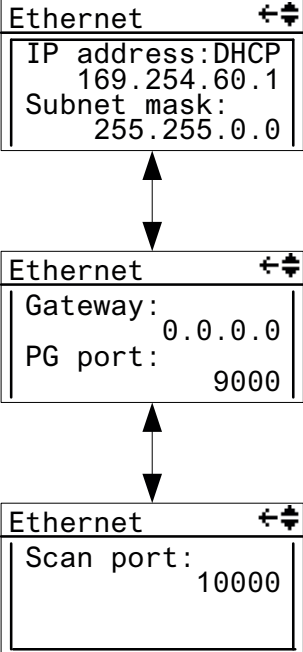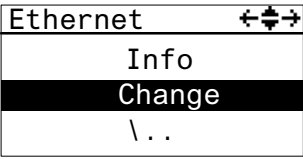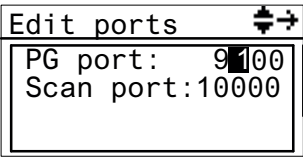
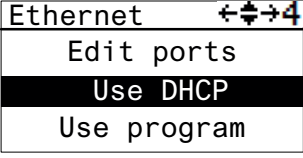
The Ethernet configuration can be displayed and changed in the **Ethernet** menu.

Display	Example	Description
Information		Display of the current Ethernet configuration
Change		Change Ethernet configuration...
Edit IP Change IP address		▶ IP address ▶ Subnet mask ▶ Gateway Adjust -> Hold down multifunction switch for 2 s in order to access change mode
Edit ports Change IP address		Adjust PG port and scan port -> Hold down multifunction switch for 2 s in order to access change mode
Use DHCP Change IP address		Obtain IP address automatically from the network (prerequisite: Network has a DHCP Server utility) -> Hold down multifunction switch for 2 s in order to perform the action

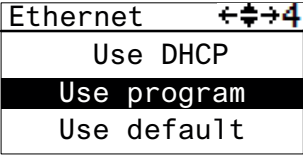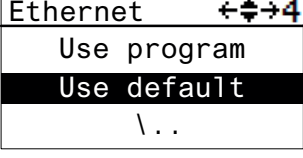Display	Example	Description
Use program Change IP address		Load Ethernet settings from the active PNOZmulti project -> Hold down multifunction switch for 2 s in order to perform the action
Use default Change IP address		Load default settings IP address: 169.254.60.1 Subnet mask: 255.255.0.0 Gateway: 0.0.0.0 -> Hold down multifunction switch for 2 s in order to perform the action


6.7.2.8

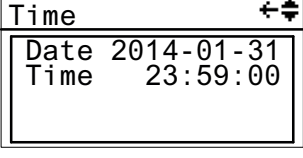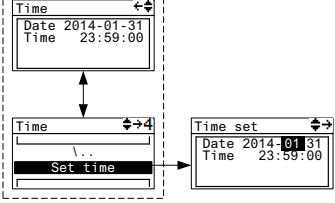Time menu

Display	Example	Description
Time Show date and time		Show system's date and time
Set time Set date and time		Change date and time -> Hold down multifunction switch for 2 s in order to access change mode

6.7.2.9

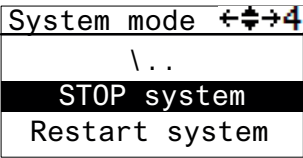System mode menu

Display	Example	Description
Stop system Restart system		Stop system Restart system -> Hold down multifunction switch for 4 s in order to perform the actions

6.8 Function test during commissioning



CAUTION!

It is essential to check that the safety devices operate correctly

- After exchanging the USB memory
- After activating a project
- When the project was reset and reloaded from the USB memory following a restart (**Reset Project** menu).

7 Operation

When the supply voltage is switched on, the PNOZmulti 2 system loads the active project from the USB memory.

7.1 LED indicators

The control system PNOZmulti is ready for operation when the **24 V**, **FS Run** and **ST Run** LEDs on the base unit are lit continuously.

Legend

-  LED on
-  LED flashes
-  LED off

The LEDs on the base unit change their label depending on the operating status

LEDs												Description	
	FS			ST			Diag			Fault			
24 V	FS Initialize	FS Run	FS Stop	ST Initialize	ST Run	ST Stop	Program Reset	Identify	Diag	IFAULT	OFAULT		Fault
													Supply voltage is present
													Reset project: the active project was deleted by the base unit.
													The base unit is identified via the PNOZmulti Configurator
													FS program is started
													ST program is started
													FS program is executed
													ST program is executed
													FS program in STOP condition
													ST program in STOP condition
													Error in FS program
													Error in ST program
													System error in FS program
													System error in ST program

LEDs												Description	
	FS			ST			Diag			Fault			
24 V	FS Initialize	FS Run	FS Stop	ST Initialize	ST Run	ST Stop	Program Reset	Identify	Diag	IFAULT	OFAULT		Fault
													Recoverable error by user in FS mode
													Recoverable error by user in ST mode

7.2 Show error stack on the display

The error stack can be read from the PNOZmulti Configurator or shown on the LC display. The error stack can store up to 64 status and error messages.

The following information is shown on the LC display:

- ▶ Sequential number of an error stack entry. A new error stack entry is stored in first place.
- ▶ Error class (EC)
- ▶ Error number (EN)
- ▶ Error parameter (EP)

Procedure for showing the error stack on the display, see section entitled Error Stack menu.

To evaluate the entries on the display please read the document **PNOZmulti Error Messages**.

8 Technical details

General	
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Application range	Failsafe
Module's device code	0x62
Electrical data	
Supply voltage	
for	Supply to the system
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	18,5 W
Output of external power supply (DC) at no load	3 W
Max. power dissipation of module	4,5 W
Status indicator	Display, LED
Test pulse outputs	
Number of test pulse outputs	4
Voltage	24 V
Current	0,32 A
Max. duration of off time during self test	4 ms
Short circuit-proof	yes
Potential isolation	No
Ethernet interface	
Number	2
IP address (automatically off)	169.254.60.1
Connection type	RJ45
Transmission rate	10 MBit/s, 100 MBit/s
Times	
Simultaneity in the two-hand circuit	0,5 s
Processing time	30 ms
Environmental data	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above sea level	2000 m

Environmental data	
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	5 - 150 Hz
Acceleration	1g
Shock stress	
In accordance with the standard	EN 60068-2-27
Duration	11 ms
Airgap creepage	
In accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Protection type	
In accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Mechanical data	
Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Cable length	
Sum of individual cable lengths at the test pulse output	2 km
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Cage clamp terminal, screw terminal
Mounting type	plug-in
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	101,4 mm
Width	45 mm
Depth	120,2 mm

Mechanical data

Weight **209 g**

Where standards are undated, the 2019-07 latest editions shall apply.

8.1 Safety characteristic data



NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
2-channel	PL e	Cat. 4	SIL 3	4,19E-10	SIL 3	3,65E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

9 Order reference

9.1 Product

Product type	Features	Order no.
PNOZ m B1 Burner	Configurable safe small controllers PNOZmulti 2, base unit, expandable, communication connection, 2 Ethernet interfaces, USB memory, specifically for burner applications.	772102

9.2 Accessories

9.2.1 Terminals

Product type	Features	Order no.
Set4 Screw Terminals	Set of plug-in screw terminals for PNOZ m B1, base unit, small controllers PNOZmulti2.	750016
Set4 Spring Terminals	Set of spring-loaded terminals for PNOZ m B1, base unit, small controllers PNOZmulti 2.	751016

9.2.2 USB memory

Product type	Features	Order no.
USB Memory 512MB	USB memory, 512 MB, for PNOZ m B1, base unit PNOZmulti 2.	779213

9.2.3 Plug-in connector

Product type	Features	Order no.
RJ45 Connector	RJ45 plug-in connector, straight, IP20, 8-pin, Cat6a, IDC connection, AWG22, cable diameter: 5.5 - 8.5 mm	380401

9.2.4 Terminating plug

Product type	Features	Order no.
PNOZ mm0.xp terminator left (10 pcs.)	Terminator on the left-hand side of the base unit PNOZmulti, yellow/black (10 pieces).	779261

10 **EC declaration of conformity**

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

11 UKCA-Declaration of Conformity

This product(s) complies with following UK legislation: Supply of Machinery (Safety) Regulation 2008.

The complete UKCA Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Representative: Pilz Automation Technology, Pilz House, Little Colliers Field, Corby, Northamptonshire, NN18 8TJ United Kingdom, eMail: mail@pilz.co.uk

► Support

Technical support is available from Pilz round the clock.

Americas

Brazil

+55 11 97569-2804

Canada

+1 888 315 7459

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 21 60880878-216

Japan

+81 45 471-2281

South Korea

+82 31 778 3300

Australia and Oceania

Australia

+61 3 95600621

New Zealand

+64 9 6345350

Europe

Austria

+43 1 7986263-0

Belgium, Luxembourg

+32 9 3217570

France

+33 3 88104003

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy, Malta

+39 0362 1826711

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

CEC® CHRE® CMSE® IndraNET p® Leansafe® Master of Security® PAS4000® PAScal® PASconfig® Pilz® PTT® PLID® PMCPromo® PMCprotego® PMCtendo® PMD® PM® PNOZ® PRBT® PRGM® Primo® PTM® PSEN® PSS® SafetyBUS p®, SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

1005294-EN-05, 2022-10 Printed in Germany
© Pilz GmbH & Co. KG, 2019

PILZ
THE SPIRIT OF SAFETY